


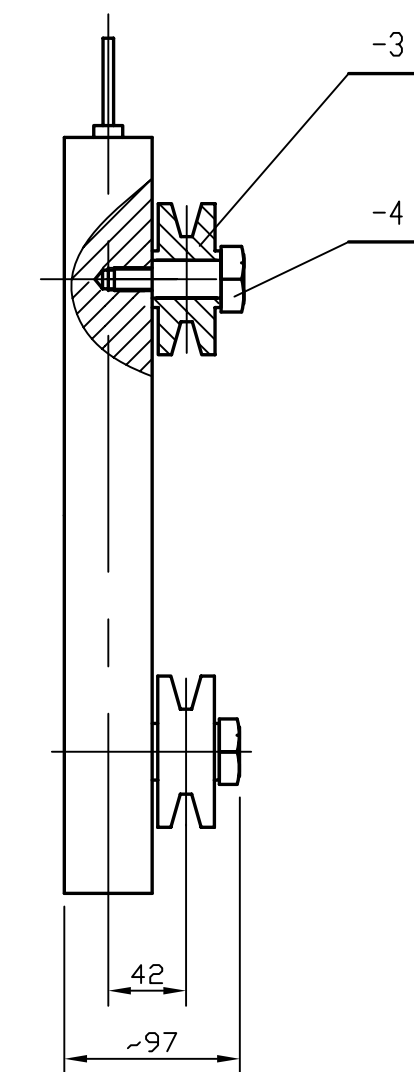

1. 装配前将轮内孔及绳槽涂满润滑脂,
2. 轮在轨道内运行应自如,

